
1btn – Open Source WiFi Connected Button



1btn (one button) uses internet to complete the task with simple, satisfying click of a single button. It connects to the internet over WiFi and triggers whatever action you have assigned to it using a easy online interface. One click, one task.

1btn specifications

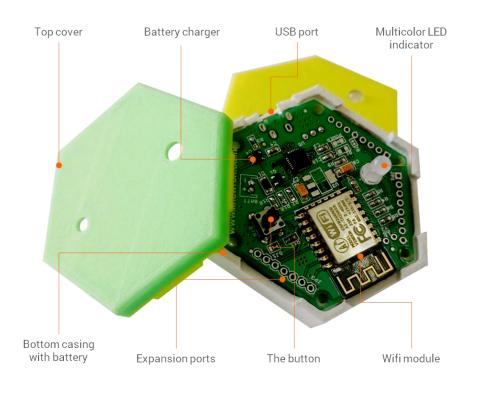

Product Name

Part Number

Connectivity

WiFi Type

Net Weight

Dimensions

Battery

Input Power

ONE BUTTON

1BTN0915V1

USB, WIFI

802.11 b/g/n

Enclosure Type 3D Printed with PLA

50 grams

6cm x 6cm x 1.5cm


4.7V, 500mAH, LiPo

5VDC, 500mA

Color Options Blue, Green, Yellow,

White, Red, Pink, Amber

pairing with your wifi

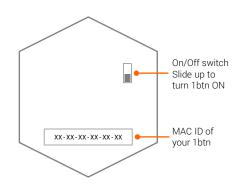

- When you turn 1btn ON, it's main action starts.
- 1btn starts searching for known wifi hotspot or access point.
- If nothing found, it enters into AP mode.
- While in AP mode you can access it's config page to provide credentials



- Search for access point "my1btn" in your smart phone's / computer's wifi list.
- Connect to this access point using password as "12345678".



- When restarted successfully, 1btn will send an event to 1btn servers and the configured action should take place – you will see GREEN blink in case of success.
- If 1btn is not yet configured using webservice or the event was unsuccessful, you will see RED blink.
- Thereafter 1btn will enter into deep-sleep mode and will be ready for button press to do the configured job.

- Open the browser and access the page with IP 192.168.1.1
- Provide your wifi credentials and press Login.
- If 1btn successfully connects to given wifi, it will restart and send it's first ping. If for any reason it cannot connect to the wifi, it will just come back to the same config page again.


REMEMBER

1btn typically remembers credentials even when in off condition. However, every time you turn on 1btn, your wifi / hotspot must be reachable. If not found, 1btn will clear those credentials and enter into AP mode for new ones.

TIP

If you want to reset or erase existing credentials or want to provide new ones; power cycle 1btn while it is kept out of range of paired wifi. When restarted, 1btn will check for previous wifi and won't find it, and it would then enter into AP mode again.

button-action configuration

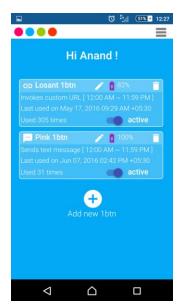


- Browse to <u>www.1btn.space</u> and sign-up to use 1btn webservice.
- Once you're verified and logged in, you will see a web console with list of your 1btns.
- You can modify, delete, activate / de-activate existing buttons as well as add new.



- Provide MAC ID of your 1btn as provided on the device bottom casing.
- Assign it a nick name which will be easy for you to remember and use.



- 1btn will perform configured action only within given time window. Select carefully time window as well as timezone for the same.
- For 24 hour operation select 00:00 to 23.59 or 12:00 AM to 11:59 PM time window...
- Note that there will be at least 1 minute resting period for 1btn.

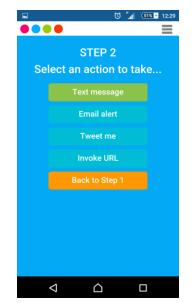


 Select one out of 4 predefined actions to be assigned to your 1btn.



- Input required information as prompted during step-3 and press Done.
- You can use system variables in your action data. More information available online on the portal.
- Once created, activate the button and you're ready to use it.

how does 1btn work?

- 1. If powered ON, 1btn will remain in deep-sleep all the time.
- 2. When you press the button on 1btn device, it triggers the micro-controller inside and wakes it from deep-sleep.
- 3. 1btn then tries to connect to the wifi router using credentials you have already provided during configuration.
- 4. If the wifi connection fails, it enters back to AP mode and would start blinking BLUE.
- 5. Upon successful connection to wifi, 1btn sends service request to 1btn API servers.
- 6. Depending upon the configuration you have setup online for it, action is performed and server responds with success / failure response.
- 7. If the action was successful, you will see GREEN blinking or else RED blinking on the device.
- 8. 1btn goes back to deep-sleep again.

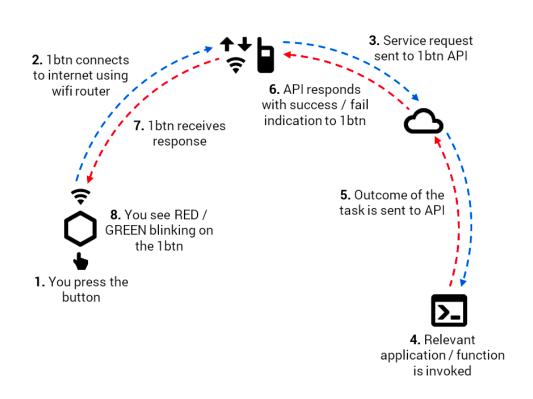

taking care of your 1btn

CHARGING

A rechargeable 500mAH lithium polymer battery is part of 1btn. Typical full charge should take you upto about 300 button presses. And you can recharge the battery by plugging in it with a mobile phone charger (or laptop USB port) with micro-USB cable. A power source of 500mA capacity can take about an hour to fully charge the battery

POWER CYCLE

Once you power up 1btn, there is no need to turn it off. 1btn usually remains in deep-sleep mode and consumes negligible amount of current. However, if you plan not to use it for longer period of time, it is good idea to turn if off.

FIXING AND PLACEMENT

1btn is good to be used as a table top device which can be moved around when needed. However, if you choose to fix it at one place, double sided tape could be an option. Remember to make an arrangement in such a way that you can take 1btn out when it's due for recharging.

1btn

OPEN SOURCE WIFI CONNECTED BUTTON

designed & developed by





